APP CryoTek Pipe Shoe



COMPRESSION TEST MECHANICAL PROPERTY

The CryoTek Pipe Shoe compression test was requested for the Gulf Pascagoula LNG Terminal project. Compression testing demonstrates our CryoTek Pipe Shoe's ability to withstand large compressive loads, even in extreme conditions.

PRODUCT TESTED:

5 (8" X 5" X 18") CryoTek Pipe Shoes.

TEST SET UP:

The CryoTek Pipe Shoes were subjected to compressive testing after submersionin a -320°F liquid nitrogen bath. 4 shoes were submerged for 20 minutes and 1 shoe was submerged for 40 minutes. An 8-inch schedule 160 carbon steel pipe was used to apply the vertical compressive load.


Below is a picture of the test set up:



COMPRESSION TEST RESULTS:

For the Gulf LNG project, the design vertical compressive load was 3,000 pounds and there was a safety factor of 5, meaning the test requirement was a vertical compressive

load of 15,000 pounds. The CryoTek Pipe Shoe exceeded the load requirements in each test.

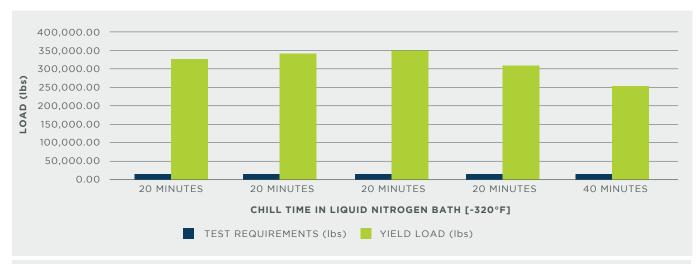

Chill Time in LN Bath (-320°F)	Test Requirement	Yield Load	Exceeded Test Requirement
Longitudinal Shear	15,000 lbs.	331,000 lbs.	316,000 lbs.
Longitudinal Shear	15,000 lbs.	346, 000 lbst	331,000 lbs.
Longitudinal Shear	15,000 lbs.	357, 000 lbs.	342,000 lbs.
Longitudinal Shear	15,000 lbs.	318, 000 lbs.	303,000 lbs.
Longitudinal Shear	15,000 lbs.	258, 000 lbs.	243,000 lbs.

CHEMICAL RESISTANCE TEST - CHEMICAL PROPERTY

Liquid nitrogen resistance testing of our CryoTek Pipe Shoe was also requested for the Gulf Pascagoula LNG Terminal project. These test results are an indicator of material performance in harsh environments.

TESTING SPECIFICATION:

ASTM C581.

TEST SET UP:

A CryoTek Pipe Shoe was immersed into a -320°F liquid nitrogen bath for more than 10 minutes. The CryoTek Pipe shoe was tested for presence of material cracks after a varied number of immersions.

CHEMICAL RESISTANCE TEST RESULTS:

Below is a chart outlining the test results:

CRYOTEK IPN COMPOSITE TECHNOLOGY: CHEMICAL RESISTANCE					
Number of Immersions	0	1	10	100	
Number of Cracks Present	0	0	0	0	


The CryoTek IPN Composite material exhibits no cracks in the laminate surface even after repeated immersions. The exceptional material performance is due to the flexibility of the resin matrix (8%) and the material's high impact strength (40 kj/m2)

FINITE ELEMENT ANALYSIS - THERMAL PROPERTY

Finite element analysis on the CryoTek Pipe Shoe was requested for the Dominion Cove Point LNG Project. The simulation demonstrates how the CryoTek VEFR technology does not promote temperature transfer.

TEST SET UP:

Simulation of the CryoTek Pipe Shoe with Aerogel Cryogel insulation. Pipe flow was simulated to be at cryogenic conditions.

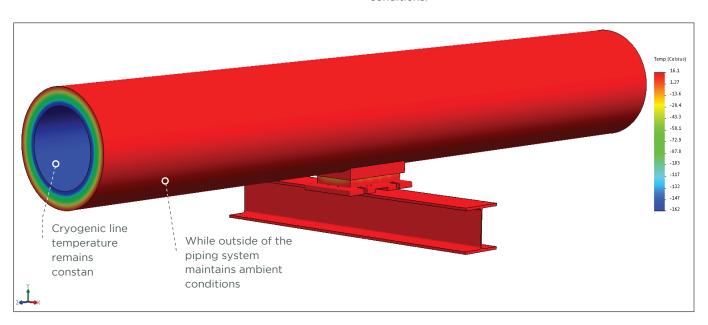

TEST RESULTS:

The FEA results demonstrate the CryoTek Pipe Shoe's excellent performance at extreme temperature conditions.

Load Location

SHEAR TESTING - MECHANICAL PROPERTY

Shear tests were performed to demonstrate our CryoTek Pipe Shoe and Epoxy's ability to withstand large loads in multiple directions, even in cryogenic temperatures.

PRODUCT TESTED:


Two CryoTek Pipe Shoes (12" X 8" X 18")

TEST SET UP:

Transverse and longitudinal shear tests were performed in cryogenic conditions. The CryoTek Pipe Shoes were connected to 12-inch stainless steel pipes with APP Epoxy (see page 7) and stainless steel banding (standard installation). The pipes were chilled to -320°F using liquid nitrogen. For the longitudinal test, a load was applied coming down on the edge of the bottom of the pi pe shoe. The failure load was noted.

Below is a picture of the test set up:



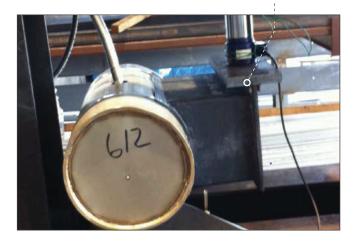

Load Location

Lorer



TEST RESULTS:

For the longitudinal shear test, the CryoTek Pipe Shoe withstood loads up to 45,000 pounds before experiencing cracking of the epoxy interface between the pipe and the

pipe shoe. For the transverse shear test, the CryoTek Pipe Shoe withstood loads up to 15,600 pounds before experiencing this epoxy cracking.

TEST	LOAD
Longitudinal Shear	45,000 lbs.
Lateral Shear	15,600 lbs.